

4 Charge



5 Switch on/off



Press and hold the button (If the mobile phone is in freezing state, long press this key for 10s to restart)

6 Cautions

- closed the ports before entering water. Ensure there are no hairs, sand grains or other particles in the soft rubber cover surrounding the phone, as this will affect how tightly the cover is closed.
- waterproof: 30 mins , up to 1.5m. destructive drop will affect the performance.
- MIL-STD-810: 2 m drop protection, impervious to dust, micro-particles and vibrations
- sound will be affected a little after immersed , will resume after dried.

Ensure battery cover, battery cover lock screw, screw hole rubber plugs, earphone and USB rubber plugs are perfectly closed to prevent water and dust from entering

There will be no specific mention of this cautionary notice again in the remainder of this manual



Please turn off the mobile phone and disconnect the battery charger from the phone prior to installing / uninstalling the SIM card

> Mobile Phone Specifications

Phone Type	4G Super Slim tri-proof Smart mobile
Operating System	Android7.0
Frequency	GSM/GPRS/EDGS: 850/900/1800/1900 WCDMA: 850/900/2100 FDD-LTE: B1/3/7/8/20 TDD-LTE:B40
Size	148.5*78.1*12.8mm
Weight	210g
Chip	MTK 6737 Quad core
Default memory capacity	ROM: 16GB RAM: 2GB Micro-SD card maximum supported 128GB
Display	5.0 HD resolution for 720*1280 pixel
Dual SIM Dual Standby	Dual SIM Dual Standby(Micro sim card)
Network type	FDD-LTE,WCDMA,GPRS,EDGE, WAP
Battery capacity	4000mAh
Operating temperature	-40°C to 70°C
Call time	25 hours
Stand-by time	About 420 hours (depends on actual network conditions)
Camera (video recording)	Front Camera-500w, Rear camera 1300w; Supported photo size max: 3120 × 4280 Supports flash photography mode\ Flashlight
Video player	Supported audio file formats: MP3,MIDI,AMR,AAC,WAV, Supported video file formats: MPEG4,3GP,MP4,AVI,MJPG
GPS FM/Sound recorder / MP3	GPS Supported
Earphone jack type supported	3.5mm earphones
Sensor	G-sensor, Proximity, Light, gyroscope
Waterproof level	IP68
SOS	Supported

> Preparation before putting in water

Waterproof bottom plug:
Please ensure the bottom plug is tightly fitted and closed in order to achieve perfect waterproof effect



- closed before entering water (For details, refer to "Installing and removing SIM card/Micro SD-card and Battery")

- Ensure there are no hairs, sand grains or other particles in the soft rubber cover surrounding the phone, as this will affect how tightly the cover is closed
Maintenance after removing from water
- After removing from water, do not uncover the phone body until it is completely wiped dry
- Open the cover facing downwards to prevent any water remaining in the cover slots from entering the phone's body
- Shake away water drops from the phone's speaker, earpiece and microphone after the entire phone has been removed from water, and then place to dry in open air. Do not use electric hair driers to dry the phone
Forbidden »
- 1. Do not use the phone in hot springs or hot water, as the waterproof soft rubber cover will be affected by high temperature leading to water entering the phone.
- 2. Do not open the battery cover if the phone's body is not completely dry. Please remember at all times.
- 3. Do not use detergents or other chemical substances to wash the phone; only use clean water.

Menu Navigation

- Holding the Phone
Please do not cover the antenna area by hands or other objects. It may cause weaken or block signal
- Adjusting Volume
Press top or bottom volume buttons to adjust ring tone volume, or adjust speaker volume when playing music or videos
- ON/OFF
Start-up and Shutdown
Press and hold the Power button to start-up the phone.
Press and hold the Power button, then select Shutdown → Yes, to turn off the phone

Note

In areas where wireless device usage is restricted (such as on airplanes and hospitals), please follow posted warnings and instructions of authorized staff. You can switch the phone to Flight Mode if you would like to only use the device's non-network features.

Using the touch screen

- Single Tap
Single tap on the display to select one icon or option. For example, tap "Phone" on main screen to open the dial pad
- Double Tap
Zoom in/out function. For example, when viewing a picture or web page, double tap the screen to enlarge or shrink the image
- Long-press and Hold
Long-press and hold the current user interface, icon or input fields to display more operating options

For example

- Long-press and hold the icons in the App Drawer, to move the icon to the Home screen;
- Long-press and hold the blank area of the Home screen, to change wallpaper.

Android Tips



• Screenshot

You can take a screenshot using a shortcut by pressing and holding both the Power button and the Volume Down button until you hear a camera click sound. After the screenshot is taken, the picture can be viewed in the photo gallery

• Android Phone Power-saving Tips

- Turn off unnecessary software processes: Long press the HOME button, select the appropriate app icon and slide to the left till it disappears;
- Lower screen brightness: While using the phone continuously, you can lower screen brightness so that battery life can be extended;
- For some settings like WLAN, GPS, network data, etc, turn them off if they are not required. Keeping these features ON also consumes lots of power.

Memory Card



• Storage Usage Tips

You can use the USB data cable to copy or move files. MP3 files are stored in the my music folder, MP4 or AVI files are stored in the Videos folder, and photos are stored in the DCIM folder

Note

Do not directly disconnect the USB data cable. Please tap Turn Off USB Storage, and exit before disconnecting to avoid data loss.

AVPos

MX20 User Manual

Thank you for purchasing the **MX20** mobile phone. Please read the instructions in this manual carefully to keep your mobile phone in an optimal state.

User Information >>>

Our company's products have obtained 3rd party certification and have passed waterproof tests before they leave our factory. Generally, it is difficult to identify the artificial factors that cause water damage for outgoing products. Therefore, it is hereby stated that water damage for outgoing products is beyond the scope of free swapping-old-for-new, free maintenance and return & refund. The OS can only be updated by official version. In case that users use non-official system, users should shoulder the safety risk and loss arising from that. (The possible risks include leakage of personal information, automatic sending SMS, location your position and etc.)

⚠ Water droplets on the screen may affect touch screen sensitivity, causing operation errors.

Disclaimer

To the extent permissible under applicable laws, MX20 will not compensate for any special, attached, indirect and secondary damages that are produced by using relevant content and descriptions in this manual, as well as pay for any loss of profit, data, goodwill or expected savings. Maximum liability on suffering any loss is limited to the purchase price paid by you (Damages will be compensated according to provisions of applicable laws unless it is a case of personal injury).

Safety matters and environment protection

🚗 Please use hands-free devices to make or receive phone calls while driving, or use the mobile phone after parking the vehicle.



Please turn off the mobile phone in case you are near medical devices that are marked with "wireless devices are forbidden" or in case you are in a hospital.



Turn off the mobile phone onboard airplanes and confirm that the alarm clock or auto power-on settings are cancelled, so as to prevent auto power-on.



Avoid using the mobile phone under too high or too low temperature environments. Avoid exposing the mobile phone under intense sunlight or high humidity environments during thunderstorms.



Waste batteries should be placed in battery recycling bins and should not be discarded.



Ensure the battery cover, lock screw, screw hole rubber plug, earphone and USB rubber plugs are perfectly closed while using near water, or in case the phone may get drenched, so as to ensure the phone remains water proof and dust proof.



During vehicle refueling, Please don't use this device near petrol stations, flammable fuel and chemicals



Avoid using at explosive blasting areas, Turn off the mobile phone at any blasting site and follow relevant regulations.



Original package accessories, Please use original package accessories and batteries to ensure optimum performance. Please do not connect any incompatible accessories.



Do not disassemble the mobile phone. Please visit authorized service centers for any maintenance requirements.



Please use the mobile phone within mobile phone network coverage area.



 
Emergency calls, You can use the mobile phone to directly dial 112 to connect to local emergency services.



Data backup, Please back up important information that is stored on the device to avoid data loss.

Getting Started >>>


>> Product Appearance and Button and Key Descriptions

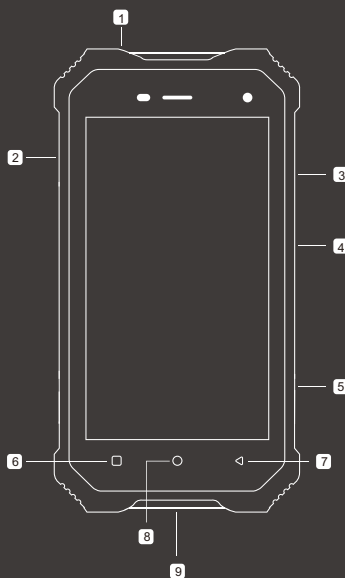


- | | | |
|-------------------------|------------------------|------------------------|
| 1 Headphone jack | 2 SIM Card slot | 3 Volume button |
| 4 Power Button | 5 Shoot Button | 6 Menu Key |
| 7 Back Key | 8 Home Key | 9 Micro USB |

Card Use Method >>>

 1. Open the dust-proof rubber cover.

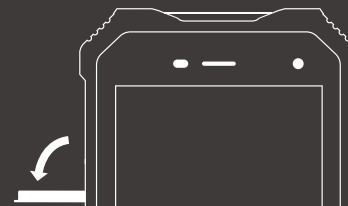

 2. Use PIN to pick out the sim card tray then place the Sim card as shown in the Sim card tray.

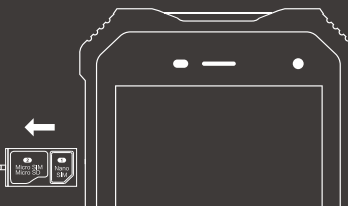

3 Parallel to the Sim card and the tray, and push in the dust cover.

