


AVPos

Model BS41

1D Laser Barcode Scanner User Manual

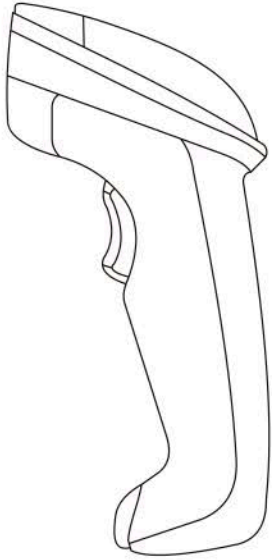

Version

V2.0

This manual is simplified, for detailed manual information please download the completed user manual from our website or obtain it from our distributor.

Factory Default



Note: Default interface: USB-HID

Setting Procedure:
Scan required bar codes

Example: Factory default, USB-HID, add suffix "Enter" barcode as below

1 Factory Default



2 Enter



Interfaces



USB-IHD



USB-COM



PS2



RS232

Scan Mode



Manual



Continuous



Automatic Flashing

Auto-Induction



ON



OFF

Buzzer



OFF



ON



Low



High

Image Inverted



Direct



Reverse

Keyboard Language



USA



UK



French

Suffix Setting



Enter



Enter&Line feed



Cancel

USB-COM、RS232 Baud Rate Setting



4800



9600



19200



38400



57600



115200

Barcode Setting



Enable Code 39



Disable Code 39



Enable UPC-A



Disable UPC-A



Enable UPC-E



Disable UPC-E



Enable EAN-13



Disable EAN-13



Enable EAN-8



Disable EAN-8



Enable Code-93



Disable Code-93



Enable Code-128



Disable Code-128



Enable Codabar



Disable Codabar



Enable Interleaved 2 of 5



Disable Interleaved 2 of 5



Enable Industrial 25



Disable Industrial 25



Enable MSI



Disable MSI



Enable Plessey



Disable Plessey



Enable Code-11



Disable Code-11



Enable Matrix 2 of 5



Disable Matrix 2 of 5



Enable Postcode 25



Disable Postcode 25



Enable Aviation 25



Disable Aviation 25



Enable GS1 Omnidirectional



Disable GS1 Omnidirectional



Enable GS1 Limited



Disable GS1 Limited