

User Guide

BP-800

AVPOS

www.avpos.es

Version Record

Version number	Version description	Version date
V 1.0.0	Initial version	2015-9-14
V 1.3.2	Optimize screen code decoding function	2016-4-21
V 1.5.1	Add menu content	2016-11-12
V 1.8.2	Optimized decoding function	2017-6-14
V 2.0.0	Add billing function	2017-7-21
V 2.1.0	<p>1. The default transmission speed in USB interface (low 15ms, middle 10ms, high 5ms) is lower than before. default transmission speed is low 15ms.Add user defined transmission speed function. The adjustable range is between 2ms-50ms which you can set what you like if you don't want the 3 levels transmission speed default by system.</p> <p>2.Add exception handling mechanism when transmission goes wrong between USB and computer. Increase compatibility of the USB.</p> <p>3. Chinese output default to off.</p> <p>4.Billing default to off.</p> <p>5. Added invoice function, now there are Special invoice and Plain invoice.</p> <p>6. Added CODE ID\ Escape function\ user-defined prefix and suffix</p> <p>7. Added multinational Keyboard layout setting</p> <p>8. The 2 or 5 extra code of magazine can be read.</p> <p>9.Added MAC (computer) keyboard support.</p> <p>10. Added on-off about the setting of LED stay semi-bright or fully bright when the scanner is to be decoded. To avoid the situation that the scanner can't be wake up in dark environment.</p>	2017-8-30
V2.1.2	1.inverse code	

	<p>2.Code ID</p> <p>3.USB USB keyboard text-transform</p> <p>4.Code 39 Full ASCLC</p> <p>5.Code 11、Code 11 check bit output、Code 11 check bit option</p> <p>6.UPC-A to EAN-13</p> <p>7.UPC-E to UPC-A</p> <p>8.Micro PCF417</p>	
--	---	--

CATALOG

1、 Product Introduction	5
1.1 Main feature	1
1.2 Unpack your device	1
1.3 Product display	2
1.3.1 External view	2
1.4 Communication port	2
1.5 Start-up, shutdown, standby and restart	2
1.6 Maintenance	2
1.7 Reading skills	3
2、 Barcode Menu	4
2.1 Mark Setting	4
2.2 Setting barcodes	4
2.2.1 Turn on/Turn off configuration code	4
2.2.2 Restore Factory Defaults	4
2.2.3 Read product batch version	5
2.2.4 Read user defaults	5
2.2.5 Interface Setting	5
2.2.6 Baud rate setting	6
2.2.7 Scanning Mode	6
2.2.8 Screen Read Mode	7
2.2.9 Start character Setting	7
2.2.10 Ending character Setting	7

2.2.11 user-defined prefix	8
2.2.12 user-defined suffix	8
2.2.13 line feed setting (USB keyboard)	9
2.2.14 Chinese output mode	9
2.2.15 invoice (For China)	9
2.2.16 invoice type (for China)	9
2.2.17 character escape	10
2.2.18 CODE ID	10
2.2.19 inverse code option	10
2.3 Beeper and LED notifications	10
2.3.1 Beeper Volume setting	10
2.3.2 startup beep	11
2.3.3 good read beep	11
2.3.4 Beep pitch-good read	11
2.3.5 beep duration-good read	11
2.3.6 error sound	12
2.3.7 good-read LED	12
2.3.8 LED control when scanner waiting activation	12
2.4 Timeout between decodes (Same barcodes)	12
2.5 USB keyboard setting	13
2.5.1 USB keyboard update speed setting	13
2.5.2 USB keyboard text-transform	14

2.6 Keyboard layout setting	14
2.7 Symbologies	16
2.7.1 enable/disable all Symbologies	16
2.7.2 Codabar	16
2.7.3 Codabar start/ending character setting	16
2.7.4 Code 11	17
2.7.5 Code 11 check bit output	17
2.7.6 Code 11 check bit option	17
2.7.7 Code 39	18
2.7.8 Code 39 check bit	18
2.7.9 Code 39 Full ASCII	18
2.7.10 Code 32 (Code 39 needs to be enabled)	18
2.7.11 Interleaved 2 of 5 (ITF5)	19
2.7.12 Interleaved 2 of 5 (ITF5) check bit	19
2.7.13 Interleaved 2 of 5 (ITF5) length setting	19
2.7.14 Industrial 2 of 5 (4-24 digits)	20
2.7.15 Matrix 2 of 5 (4-24)	20
2.7.16 Code 93	20
2.7.17 Code 128	21
2.7.18 GS1-128	21
2.7.19 UPC-A	21
2.7.20 UPC-A check bit	21

2.7.21 UPC-A to EAN-13	21
2.7.22 UPC-E	22
2.7.23 UPC-E check bit	22
2.7.24 UPC-E to UPC-A	22
2.7.25 EAN/JAN-8	22
2.7.26 EAN/JAN-13	23
2.7.27 UPC/EAN/JAN extra bit	23
2.7.28 EAN13 turn ISBN	23
2.7.29 EAN13 turn ISSN	23
2.7.30 GS1 DataBar (RSS14)	24
2.7.31 GS1 DataBar Limited	24
2.7.32 GS1 DataBar Expanded	24
2.7.33 PDF417	24
2.7.34 Micro PDF417	24
2.7.35 QR Code	25
2.7.36 Micro QR	25
2.7.37 Data Matrix	25
2.7.38 Aztec Code	25
APPENDIX	26
Appendix 1 data and editing code	26
Appendix 2 code type ID table	28
Appendix 3 eyeball character ASCII table	28

Appendix 4 operational character (USB keyboard)	29
Appendix 5 operational character (serial port and USB-VCOM)	30
configuration instruction and example	32

1.1 Main feature

- * Complete independent research and development, possessing the complete set of patent, plug and play without the need to install driver.
- * Wide voltage design to avoid the data can't be transmitted due to voltage fluctuation.
- * 32-bit master chip equipped with patented software, the scanner can smoothly decode reflective, wrinkled, blurred, and colorful barcode, and can also normally scan in light and dark environment.
- * Adopt all tantalum capacitors and anti-oxidation optical technology, avoiding the problem of performance declining after long-term using.

1.2 Unpack your device


After you open the shipping carton containing the product, take the following steps:

- Take the accessories for scanner out from package.
- Check with the packing list to see if everything is complete and in good condition.

If there are any damaged or missing components, please keep the original package and contact your supplier for after-sales service.

1.3 Product display

1.3.1 External view

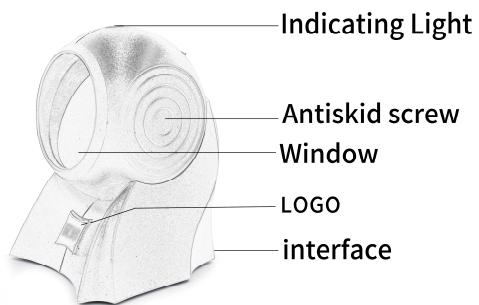

1.4 Communication port

The scanner must be connected to a host to operate. Host can be a PC, POS machine, intelligent terminal with USB or RS-232 interface.

USB

USB interface on host



RS-232

RS-232 interface on host



1.5 Start-up, shutdown, standby and restart

Start-up: Connect host computer with scanner, which will automatically start-up and in working state.

Shutdown: Remove the data cable which is connected with scanner; remove the USB which is connected with host computer; remove the power adapter which is inserted into RS-232 serial port.

Standby: Scanner with automatic sleep standby function, if 30 minutes without work it will be in standby mode, but it will automatically start-up when barcode approach.

Restart: If the scanner crashes or doesn't respond, please switch it off and restart.

1.6 Maintenance

* The window must be kept clean, the supplier do not bear the guarantee responsibility due

to the improper maintenance.

- * Avoid the window being wear and tear or scratched by hard object
- * Use the hairbrush to remove the stain on the window
- * Clean the window with a soft cloth, such as lens cleaning cloth
- * Spraying liquid onto the window is prohibited.
- * Prohibit any cleaning solvents, except for the cleaning water.

1.7 Reading skills

If the barcode is small, it should be closer to the scanning window; if the barcode is large, it should be far away from the scanning window a little more, thus easier to be read correctly.

If the barcode is highly reflective (for example, the coated surface), you may need to tilt the barcode at an angle to successfully scan it.

Barcode scanning example:





Configuration Code Turn on

2、Barcode Menu

This model of laser desktop barcode scanner is designed to change settings by reading some special barcode, which we will give you a detailed introduction and show you all the barcodes for the corresponding setting in this section.

The greatest advantage of this setting method is direct, intelligible and user friendly.

2.1 Mark Setting




2.2 Setting barcodes

2.2.1 Turn on/Turn off configuration code

When the configuration code is turn on, All configuration codes available;

When the configuration code is turn off, you need setting it.

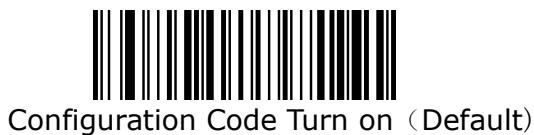

Configuration Code Turn off

2.2.2 Restore Factory Defaults



Restore Factory Defaults



Configuration Code Turn on

2.2.3 Read product batch version



product batch version

2.2.4 Read user defaults

Save the current menu settings as user-defined menu settings.



Save user defaults

You can restore the menu settings for the user-defined menu settings.



Restore user defaults

2.2.5 Interface Setting

This desktop scanner support USBKB、USB to serial port、serial port interface。

You can set USB PC KB、USB MAC KB interface by scanning below barcode.



USB MAC KB



USB KB (default)



Configuration Code Turn on

You can set serial port interface by scanning below barcode.



Serial port

You can set USB to serial port interface by scanning below barcode. (Need drive, please contact the sales)



USB to serial port

2.2.6 Baud rate setting



Baud Rate 4800



Baud Rate 9600 (default)



Baud Rate 38400



Baud Rate 19200



Baud Rate 57600



Baud Rate 115200

2.2.7 Scanning Mode



Continuous scanning mode
(Default)



Enable Automatic Recognition Mode



Configuration Code Turn on

2.2.8 Screen Read Mode

When you turn on this mode, Scanners can be decoding the codes on phone or computer. However, turn on this code will be cause lower speed when scanning printing codes. The default is turn off.



Disable Screen Read Mode (Default)



Enable Screen Read Mode

2.2.9 Start character Setting



Cancel start character



Add STX

2.2.10 Ending character Setting



Cancel ending character



Add Enter



Add Tab



Add Enter+Tab



Add ETX



Configuration Code Turn on

2.2.11 user-defined prefix

Output:



Enable user-defined prefix



Disable user-defined prefix (default)

edit



clear all user-defined prefix



user-defined prefix

(After scan this code you can set the prefix you want based on the data
and barcode in table ID)

2.2.12 user-defined suffix

Output



Enable user-defined suffix



Disable user-defined suffix (default)

edit



clear all user-defined suffix



user-defined suffix

(After scan this code you can set the suffix you want based on the data
and barcode in table ID)



Configuration Code Turn on

2.2.13 line feed setting (USB keyboard)



Only 0A(line feed)works



Only 0D(carriage return)works (default)



Both 0A(LR) and 0D(CR) works

2.2.14 Chinese output mode



English output (default)



Chinese output (TXT/excel)



Chinese output (Word)

2.2.15 invoice (For China)



Disable invoice code



Enable invoice code

In order to make sure the invoice output correctly, when you use invoice function please set Chinese output to "Chinese output(TXT/excel)".

2.2.16 invoice type (for China)



Special invoice (default)



plain invoice



Configuration Code Turn on

2.2.17 character escape



Enable character escape



Disable character escape (default)

2.2.18 CODE ID



Disable CODE ID (default)



Enable CODE ID after the barcode



Enable CODE ID before the barcode

2.2.19 inverse code option

(Only 1D/Data Matrix/Aztec)



Only decode normal code (default)



Only decode inverse code




Decode both normal code and inverse code

2.3 Beeper and LED notifications

2.3.1 Beeper Volume setting



Volume low

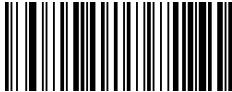

Configuration Code Turn on



Volume high (default)

2.3.2 startup beep



Shut down startup beep



Open startup beep (default)

2.3.3 good read beep



good read beep on



good read beep off (default)

2.3.4 Beep pitch-good read



Low pitch



Middle pitch (default)



High pitch

2.3.5 beep duration-good read



Tone long (default)




Tone pip



Configuration Code Turn on

2.3.6 error sound

You will hear 4 continue alarm sounds when data upload failure, one single alarm sound means scan indistinguishableness barcode.

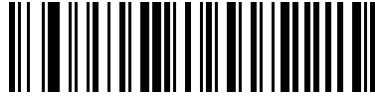

error sound low pitch (default)



error sound middle pitch



error sound high pitch

2.3.7 good-read LED



Good-read LED off



Good-read LED on (default)

2.3.8 LED control when scanner waiting activation



LED OFF (default)



LED low light

2.4 Timeout between decodes (Same barcodes)

By default, the interval time between first scanning and second scanning for same barcode is 200ms. To avoid being repeatedly with a barcode, you can set the scan interval.



300ms



Configuration Code Turn on



500ms



750ms (default)



1s



2s

2.5 USB keyboard setting

2.5.1 USB keyboard update speed setting

There barcode is used to set the update speed when scanner is in USB keyboard pattern. If the performance of your PC is lower, we suggest you choose slow update speed to make sure the scanner update the right data.



Slow update speed (default)



Middle update speed



Fast update speed



User-defined update speed



Configuration Code Turn on

2.5.2 USB keyboard text-transform



Normal output (default)



Case reversal



all Caps



lower case

2.6 Keyboard layout setting



English (United States)



French (France)



Italian (Italy)



Italian 142 (Italy)



German (Germany)



Spanish (Spain)



Configuration Code Turn on



Japanese



Finnish



Russian (typewriter)



Russian (MS)




Arabic (101)



Irish



Polish (214)

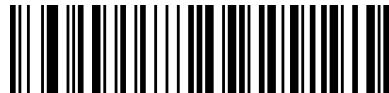

Polish (Programmers)



Dutch (Netherlands)



Czech (QWERTZ)



Portuguese (Portugal)



Portuguese (Brazil)



Configuration Code Turn on



Swedish (Sweden)



Turkish Q



Turkish F



Greek (MS)

2.7 Symbologies

2.7.1 enable/disable all Symbologies

Enable all barcode might slow down scanner decode speed. We suggest enable the barcode you need based on your scene. Enable all barcode is default



Enable all Symbologies



Disable all Symbologies

2.7.2 Codabar



Enable Codabar



Disable Codabar

2.7.3 Codabar start/ending character setting



Don't send Codabar start/ending character (default)



Configuration Code Turn on



Send Codabar start/ending character

2.7.4 Code 11



Enable Code 11



Disable Code 11 (default)

2.7.5 Code 11 check bit output



Enable Code 11 check bit output



Disable Code 11 check bit output (default)

2.7.6 Code 11 check bit option



Disable Code 11 (default)



Code 11 one check bit



Code 11 two check bits



Configuration Code Turn on

2.7.7 Code 39



Enable Code 39



Disable Code 39

2.7.8 Code 39 check bit



Disable Code 39 check (default)



Enable Code 39 check don't send check bit



Enable Code 39 check send check bit

2.7.9 Code 39 Full ASCII



Enable Full ASCII



Disable Full ASCII (default)


2.7.10 Code 32 (Code 39 needs to be enabled)



Enable Code 32



Disable Code 32

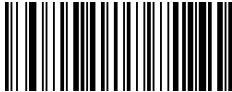

Configuration Code Turn on

2.7.11 Interleaved 2 of 5 (ITF5)



Disable ITF25



Enable ITF25

2.7.12 Interleaved 2 of 5 (ITF5) check bit



Enable ITF25 check don't send check bit



Disable ITF25 check (default)

2.7.13 Interleaved 2 of 5 (ITF5) length setting



ITF25 No Fixed Length (4-24) (default)



Enable ITF25 check send check bit



ITF25 Fixed Length of 8



ITF25 Fixed Length of 6



ITF25 Fixed Length of 12 Digits



ITF25 Fixed Length of 10 Digits



ITF25 Fixed Length of 14 Digits



Configuration Code Turn on

ITF25 Fixed Length of 16 Digits



ITF25 Fixed Length of 16 Digits



ITF25 Fixed Length of 18 Digits



ITF25 Fixed Length of 20 Digits



ITF25 Fixed Length of 22 Digits



ITF25 Fixed Length of 24 Digits

2.7.14 Industrial 2 of 5 (4-24 digits)



Enable Industrial 2 of 5



Disable Industrial 2 of 5

2.7.15 Matrix 2 of 5 (4-24)



Enable Matrix 2 of 5



Disable Matrix 2 of 5

2.7.16 Code 93



Enable Code 93





Configuration Code Turn on

Disable Code 93

2.7.17 Code 128



Disable Code 128



Enable Code 128

2.7.18 GS1-128



Disable GS1-128



Enable GS1-128

2.7.19 UPC-A



Disable UPC-A



Enable UPC-A

2.7.20 UPC-A check bit



Don't Send UPC-A check bit



Send UPC-A check bit (default)

2.7.21 UPC-A to EAN-13



Enable UPC-A to EAN-13



Configuration Code Turn on



Disable UPC-A to EAN-13 (default)

2.7.22 UPC-E



Disable UPC-E



Enable UPC-E

2.7.23 UPC-E check bit



Don't Send UPC-E check bit



Send UPC-E check bit (default)

2.7.24 UPC-E to UPC-A



Disable UPC-E to UPC-A (default)




Enable UPC-E to UPC-A

2.7.25 EAN/JAN-8



Disable EAN/JAN-8

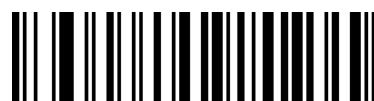

Enable EAN/JAN-8



Configuration Code Turn on

2.7.26 EAN/JAN-13



Disable EAN/JAN-13



Enable EAN/JAN-13

2.7.27 UPC/EAN/JAN extra bit



Decode UPC/EAN/JAN extra bit



Ignore UPC/EAN/JAN extra bit (default)



Auto adapt UPC/EAN/JAN extra bit

2.7.28 EAN13 turn ISBN



Enable EAN13 turn ISBN



Disable EAN13 turn ISBN (default)

2.7.29 EAN13 turn ISSN



Enable EAN13 turn ISSN



Disable EAN13 turn ISSN (default)



Configuration Code Turn on

2.7.30 GS1 DataBar (RSS14)



Disable GS1 DataBar



Enable GS1 DataBar

2.7.31 GS1 DataBar Limited



Disable GS1 DataBar Limited



Enable GS1 DataBar Limited

2.7.32 GS1 DataBar Expanded



Disable GS1 DataBar Expanded



Enable GS1 DataBar Expanded

2.7.33 PDF417



Disable PDF417



Enable PDF417

2.7.34 Micro PDF417



Disable Micro PDF417



Enable Micro PDF417



Configuration Code Turn on

2.7.35 QR Code



Disable QR



Enable QR

2.7.36 Micro QR



Disable Micro QR



Enable Micro QR

2.7.37 Data Matrix



Disable Data Matrix



Enable Data Matrix

2.7.38 Aztec Code



Disable Aztec



Enable Aztec



Configuration Code Turn on

APPENDIX

Appendix 1 data and editing code



0



1




2




3



4

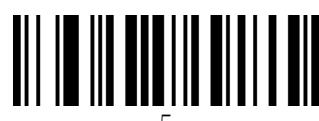

5

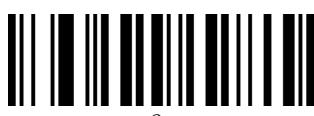

6



7



8



9



Configuration Code Turn on



A



B



C



D



E



F



Save



cancel the data read last
time



Cancel all data read before



Cancel current
setting



Configuration Code Turn on

Appendix 2 code type ID table

Code type	HEX	CODE ID(default)
All codes	99	
Codabar	61	a
Code128	6A	j
Code32	3C	<
Code93	69	i
Code39	62	b
Code11	68	h
EAN		
EAN-13	64	d
EAN-8	44	D
GS1		
GS1 DataBar	79	y
GS1 DataBar Limited	7B	{
GS1 DataBar Expanded	7D	}
GS1-128 (EAN-128)	49	I
2 of 5		
Interleaved 2 of 5	65	e
Matrix 2 of 5	6D	m
Industry 2 of 5	66	f
UPC		
UPC-A	63	c
UPC-E	45	E
Aztec Code	7A	z
DataMatrix	77	w
PDF417	72	r
Micro PDF417	52	R
QR Code	73	s
Micro QR Code	73	s



Configuration Code Turn on

Appendix 3 eyeball character ASCII table

decimal	hexadecimal	character	decimal	hexadecimal	character	decimal	hexadecimal	character
32	20	<SPACE>	64	40	@	96	60	`
33	21	!	65	41	A	97	61	a
34	22	"	66	42	B	98	62	b
35	23	#	67	43	C	99	63	c
36	24	\$	68	44	D	100	64	d
37	25	%	69	45	E	101	65	e
38	26	&	70	46	F	102	66	f
39	27	'	71	47	G	103	67	g
40	28	(72	48	H	104	68	h
41	29)	73	49	I	105	69	i
42	2A	*	74	4A	J	106	6A	j
43	2B	+	75	4B	K	107	6B	k
44	2C	,	76	4C	L	108	6C	l
45	2D	-	77	4D	M	109	6D	m
46	2E	.	78	4E	N	110	6E	n
47	2F	/	79	4F	O	111	6F	o
48	30	0	80	50	P	112	70	p
49	31	1	81	51	Q	113	71	q
50	32	2	82	52	R	114	72	r
51	33	3	83	53	S	115	73	s
52	34	4	84	54	T	116	74	s
53	35	5	85	55	U	117	75	u
54	36	6	86	56	V	118	76	v
55	37	7	87	57	W	119	77	w
56	38	8	88	58	X	120	78	x
57	39	9	89	59	Y	121	79	y
58	3A	:	90	5A	Z	122	7A	z
59	3B	;	91	5B	[123	7B	{
60	3C	<	92	5C	\	124	7C	
61	3D	=	93	5D]	125	7D	}
62	3E	>	94	5E	^	126	7E	~
63	3F	?	95	5F	_			



Configuration Code Turn on

Appendix 4 operational character (USB keyboard)

decimal	hexadecimal	Corresponding key value (disable CODE ID)	Corresponding key value (enable CODE ID)
0	00	retain	Ctrl+@
1	01	Insert	Ctrl+A
2	02	Home	Ctrl+B
3	03	End	Ctrl+C
4	04	Delete	Ctrl+D
5	05	PageUp	Ctrl+E
6	06	PageDown	Ctrl+F
7	07	ESC	Ctrl+G
8	08	Backspace	Backspace
9	09	Tab	Tab
10	0A	Enter (The configuration of CRLF processing decide how it express)	Ctrl+J
11	0B	Caps Lock	Ctrl+K
12	0C	Print Screen	Ctrl+L
13	0D	Enter (The configuration of CRLF processing decide how it express)	Enter
14	0E	Scroll Lock	Ctrl+N
15	0F	Pause/Break	Ctrl+O
16	10	F11	Ctrl+P
17	11	Direction key ↑	Ctrl+Q
18	12	Direction key ↓	Ctrl+R
19	13	Direction key ←	Ctrl+S
20	14	Direction key →	Ctrl+T
21	15	F12	Ctrl+U
22	16	F1	Ctrl+V
23	17	F2	Ctrl+W
24	18	F3	Ctrl+X
25	19	F4	Ctrl+Y
26	1A	F5	Ctrl+Z
27	1B	F6	ESC
28	1C	F7	Ctrl+\
29	1D	F8	Ctrl+]



Configuration Code Turn on

30	1E	F9	Ctrl+^
31	1F	F10	Ctrl+_

Appendix 5 operational character (serial port and USB-VCOM)

decimal	hexadecimal	character
0	00	NUL
1	01	SOH
2	02	STX
3	03	ETX
4	04	EOT
5	05	ENQ
6	06	ACK
7	07	BEL
8	08	BS
9	09	HT
10	0A	LF
11	0B	VT
12	0C	FF
13	0D	CR
14	0E	SO
15	0F	SI
16	10	DLE
17	11	DC1
18	12	DC2
19	13	DC3
20	14	DC4
21	15	NAK
22	16	SYN
23	17	ETB
24	18	CAN
25	19	EM
26	1A	SUB
27	1B	ESC
28	1C	FS
29	1D	GS
30	1E	RS
31	1F	US



Configuration Code Turn on





Configuration Code Turn on

configuration instruction and example

Example for user-defined prefix and suffix:

You can edit 10 characters as prefix or suffix. (In order to make sure the prefix and suffix can output normally, please enable user-defined prefix or suffix first)

Example 1.1: Add XYZ to all type of barcode as prefix.

Look up appendix 2, you can find that the HEX value for all codes is “99”. Look up appendix 3, the HEX value for XYZ is “58,59,5A”. First scan “user-defined prefix” in 2.2.11 edit, then the scanner will have two sounds like “D...D...”, then scan 9, 9, 5, 8, 5, 9, 5, A, and save, the setting accomplished.

If you want to change the prefix or suffix you set before you save the setting, you can scan “cancel the data read last time” or “Cancel all data read before” to reset. If you want to give up setting scan “Cancel current setting”.

Example 1.2: Add Q to QR code as prefix.

Look up appendix 2, you can find that the HEX value for QR code is “73”. Look up appendix 3, the HEX value for Q is “51”. First scan “user-defined prefix” in 2.2.11 edit, then the scanner will have two sounds like “D...D...”, then scan 7, 3, 5, 1, and save, the setting accomplished.

Example 1.3: Cancel user-defined prefix in QR code

When you edit user-defined prefix and suffix, it will cancel the prefix and suffix you set if you scan “user-defined prefix” or “user-defined suffix” and add no character and save.

For example, cancel user-defined prefix in QR code, first scan “user-defined prefix”, then scan 7,3, and save. The prefix in QR code has been canceled.

Note: If there is a prefix for all type of barcode, after you done the operation above, the QR code will have the prefix you set for all type barcode.

If you need to cancel all prefix or suffix for all type of barcode, please scan “clear all user-defined prefix” and “clear all user-defined suffix”

USB update speed setting example

If the PC is weak properties, it is easy to have error of transmission and you need to set USB keyboard update speed to low speed, like 50ms (user-defined speed)

First, scan “User-defined update speed” then scan 5,0 in appendix 1 and save



Configuration Code Turn on

AVPOS

www.avpos.es